
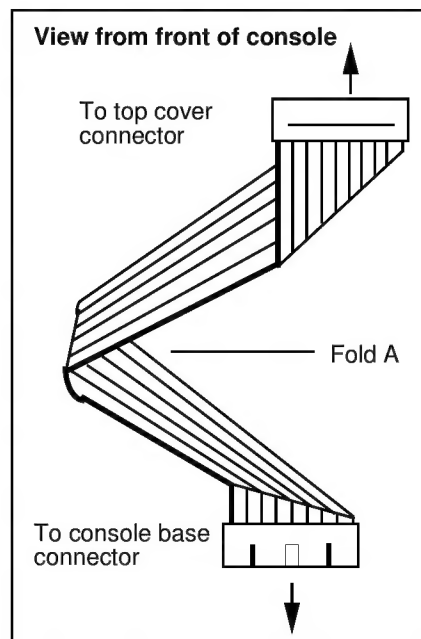


M2250 Attendant Console

Internal cable routing

Use this instruction sheet to route the cable within the M2250 if the attendant console is opened for QMT2 switch setting or installing add-on module(s). Make sure the cable is routed properly each time you close the top cover. For more detailed instructions, see *Installation procedures for telephone sets and attendant consoles*, 553-3001-215.

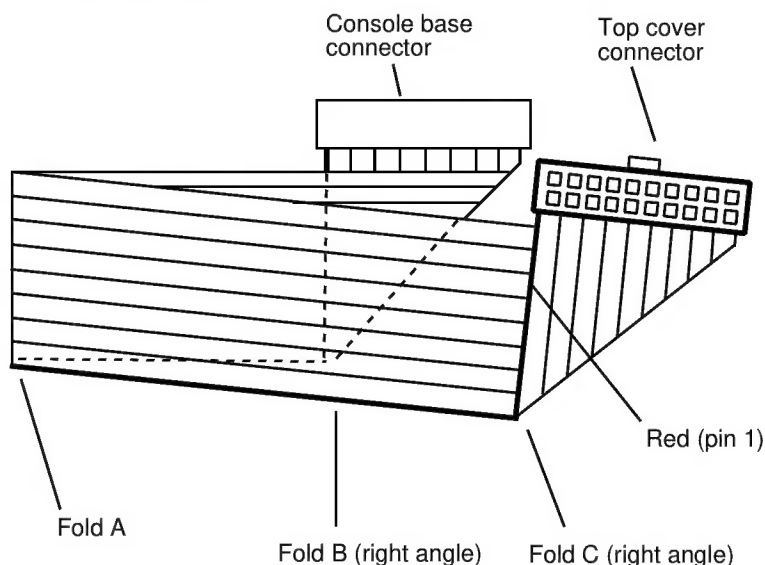

- 1 Remove the ribbon cable from the base and top cover of the attendant console and fold it as shown above.
- 2 Hold the top cover over the attendant console and reconnect the ribbon cable connectors onto the attendant console so that Fold A is to the left of the connector on the console base (see inset).
- 3 Set the volume slider control on the top cover to the left-most position. Set the volume slider switch on the console base (front center) to the left-most position.
- 4 Slide the top cover back and down into place.
- 5 Hold the top cover and console base firmly together. Turn the assembly upside down and place it on a foam sheet.
- 6 Insert the twelve screws that secure the top cover to the console base and tighten.

Information contained in this document is subject to change. Northern Telecom reserves the right, without notice, to make changes in equipment design or program components as progress in engineering, manufacturing or technology may warrant.

Printed in U.S.A.

Issue 3
April 1990

M2250 attendant console— Attendant Supervisory Module

Installation procedures

Use this procedure to install the Attendant Supervisory Module (ASM) in the M2250 attendant console, minimum vintage AC. For more detailed information, refer to *Telephone and attendant console installation* (553-3001-215).

Disconnect all cables from the rear of the attendant console, and remove the handset(s) jackplug(s) from either side.

Move adjustable display to down position to protect it from damage while installing the ASM. Move the volume slider switch to the left-most position.

Place the attendant console face-down on a clean polystyrene foam sheet (used to protect the console and work surface), taking care to avoid scratching or damaging the top cover or display.



Remove the adjustable stand, if equipped. The stand is secured with four screws. Loosen the screws and remove the stand as a complete assembly, and set aside.


Remove the Busy Lamp Field/Console Graphics Module (BLF/CGM), if equipped. The module is secured with two screws. Loosen the screws and unsnap the module from the console. Leave the ribbon cable connected.

Remove the twelve fastening screws in the base of the attendant console that secure the top cover to the console base. Holding the console base and cover firmly, turn it back over so that the top cover is on, facing up.

Raise and hold the top cover to disconnect the single cable connector. Disconnect the BLF/CGM ribbon cable, if equipped. Remove the top cover and place it aside.

(continued on other side)

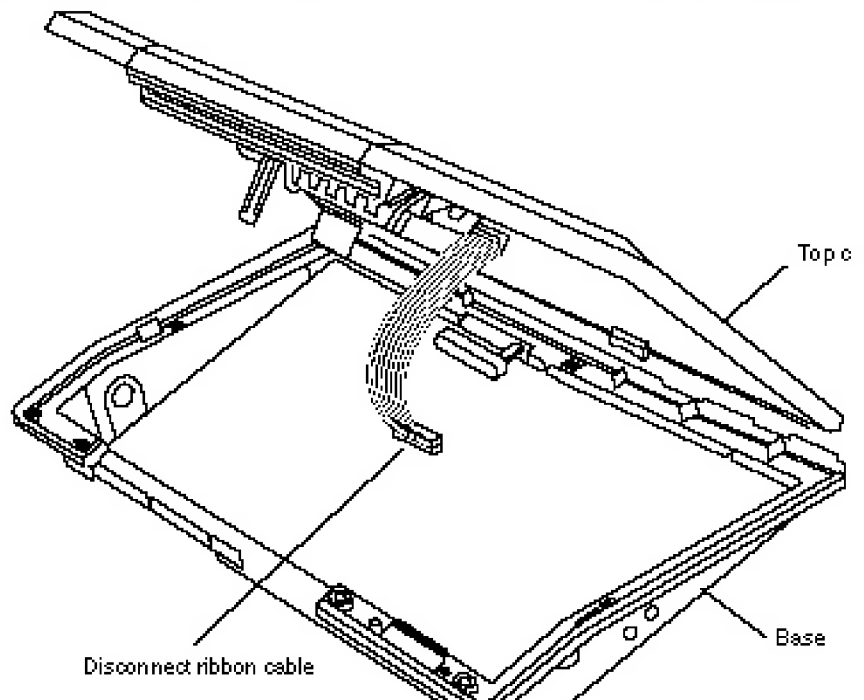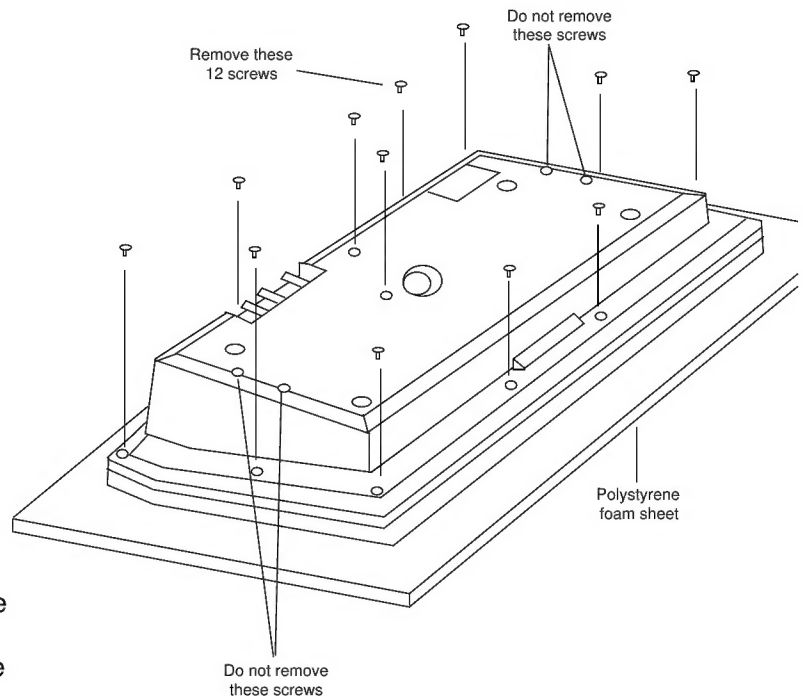

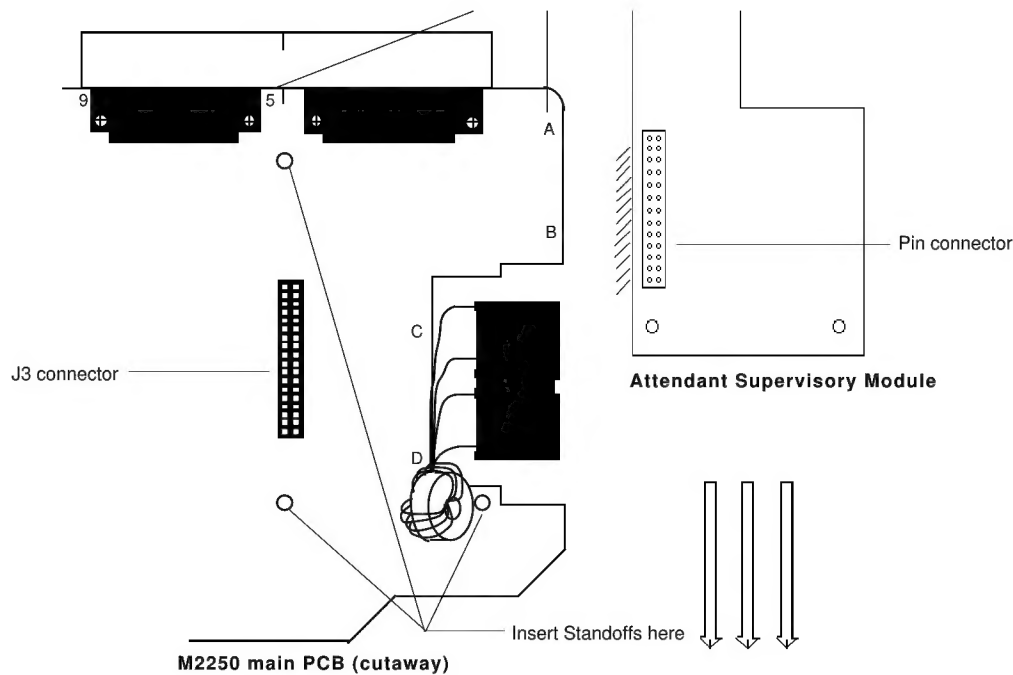

(continued from other side)

The attendant console's main PCB has holes located in the upper right-hand side, near grid positions D1, D5, and A5. Insert one Standoff in each of the holes, pressing down and twisting it until it is secure.

Position ASM board over J3 connector on the console's main PCB. Align holes on ASM board with the Standoffs and carefully work ASM pin connector into connector J3 until firmly seated.

Hold the top cover over the attendant console and reconnect the cable connector onto the base of the console. Reconnect the BLF/CGM ribbon cable, if equipped.

Place the top cover on the console. Slide it back and down into place. Check that all cables are in the correct positions, and that none are trapped. Ensure that plastic ESD strip does not become pinched between base and top cover when closed.

Ensure that the volume switch is fully engaged in the slider. Hold the top cover and console base firmly together and turn the assembly upside down.

Reinsert the twelve screws that secure the top cover to the console base and tighten. Attach the BLF/CGM, if equipped.

If required, install the adjustable stand.

Reconnect the cables to the rear of the console.

Test the Supervisory Console feature to make sure you can now properly supervise the M2250 attendant console. Refer to *M1250 and M2250 Attendant Console user guide* (P0728489).

Copyright Northern Telecom, 1990

Title to and ownership of Meridian SL-1 software shall at all times remain with Northern Telecom. Meridian SL-1 software shall not be sold outright and the use thereof by the customer shall be subject to the parties entering into a software agreement as specified by Northern Telecom.

Information contained in this document is subject to change. Northern Telecom reserves the right, without notice, to make changes in equipment design or program components as progress in engineering, manufacturing or technology may warrant.

Ordering number:
P0713953

Issue 1

Printed in U.S.A.

December 1990

